



4G/SMS/Ethernet Contact ID Communicator

PSTN/4G Contact ID Protocol to SMS Alert & SIA IP Converter



User Manual

Ver 1.2

Model: WGSMSC

Date Issued: 2017-08-05

Table of Contents

1. Introduction	3
2. Specifications	3
3. Features	3
4. Standard Package	4
5. Overview of Main Panel	4
6. Indicator Lights	5
7. Connection	5
8. Installations	5
8.1 Install the USB Driver on PC	6
8.2. Install the USB Driver on PC	6
8.3. Settings in PC Configurator	6
8.3.1 The Menu Bar of the PC configurator	7
8.3.2 GPRS data Parameter Setting	7
8.3.3 The Phone Numbers for Events Notification	8
8.3.4 Set the Password and PIN Code Verification	8
8.3.5 Set the OC Outputs Names	8
8.3.6 Set the CMS Server IP address and Server Port	9
8.3.7 Set the Output pulse time and Ethernet parameter	9
8.3.8 The other buttons in PC configurator	10
8.3.9 Set the SMS Notification Contents	10
8.4.0 Engineer Debug for GPRS Data Transmission	11
9. SMS Commands	11
10. Warranty	13

This handbook has been designed as a guide to the installation and operation of GSM Communicator.

Statements contained in the handbook are general guidelines only and in no way are designed to supersede the instructions contained with other products. We recommend that the advice of a registered electrician be sought before any Installation work commences.

Cornick Co., Ltd, its employees and distributors, accept no liability for any loss or damage including consequential damage due to reliance on any material contained in this handbook.

Cornick Co., Ltd, its employees and distributors, accept no liability for GSM Network upgrading or SIM Card upgrading due to the technology specifications contained in this handbook.



Safe Startup

Do not use GSM unit when using GSM equipment is prohibited or might bring disturbance or danger.



Interference

All wireless equipment might interfere network signals of GSM unit and influence its performance.

1. Introduction

The *GSM/3G/4G Communicator WGSMSC* is specially designed for existing Watchguard alarm systems.

The *GSM/3G/4G Communicator WGSMSC* can transfer the Alert Message from your PSTN Contact ID (SIA DC-05) Control panel into SIA DC-09 protocol over Ethernet/GPRS network and SMS notification. It can change alert notifications from traditional PSTN alert to Ethernet/wireless alert (SIA standard DC-09 requirements).

(**Notice:** 'WGSMSC' will be written in the following contents below instead of 'GSM/3G/4G LTE Communicator WGSMSC')

2. Specifications

Signal Frequency	GSM850 / 900 / 1800 / 1900 MHz (3G/4G module optional) ; For example: Customer only need to replace the module for upgrading WGSMSC from 3G to 4G
Communication Ways	Ethernet & TCP/IP via GPRS
Message Transmission Protocols	SIA DC-09-2007 or SIA DC-09-2012 (WGSMSC) SIA DC-05 (PSTN Control Panel)
Outputs	OUT1, OUT2 ,OC type, commutates voltage of up to 30 V and direct current of up to 1 A
Configuration	via USB port or SMS commands
Power Supply	DC 9V ---24 V
Used Current	10 ---30 mA (on standby), up to 70 mA (while sending data)
Workplace	Temperature from -10C to +50C, Relative humidity up to 80 % when +20 C
Backup battery	900mAH
Exterior dimension	105 mm * 88 mm * 30 mm (W*D*H)

3. Features

- Easy programmed by PC configuration, compatible with most alarm panels.
- Modular system, upgrade 3G/4G only need to replace the module.
- Supports transferring data by PSTN Ethernet or GPRS, SMS (*no phone call*),
- Supports 2 different CMS centers (IP addresses or DNS server).


- SMS notification when the connection with the CMS center is failed (3 trial times).
- When PSTN network failed, it will send the alert message to the center by Ethernet/GPRS network,
- When the PSTN network good, then it will not use GPRS network etc. for transferring alert message,
- 5 users to receive SMS notification on Alarm, Supervision, Trouble, By pass, Test, GPRS fail, DC loss,
- SMS commands to check the device version, IMEI code, GSM signal,
- 2 OC outputs which could be controlled by SMS commands, output pulse time can be set.
- Support firmware upgrading via USB.
- Supports PIN code verification in PC configurator.
- Remote configuration by SMS commands.
- Backup rechargeable battery, with DC power failure SMS alert.




4. Standard Package

Main Panel x 1 piece,



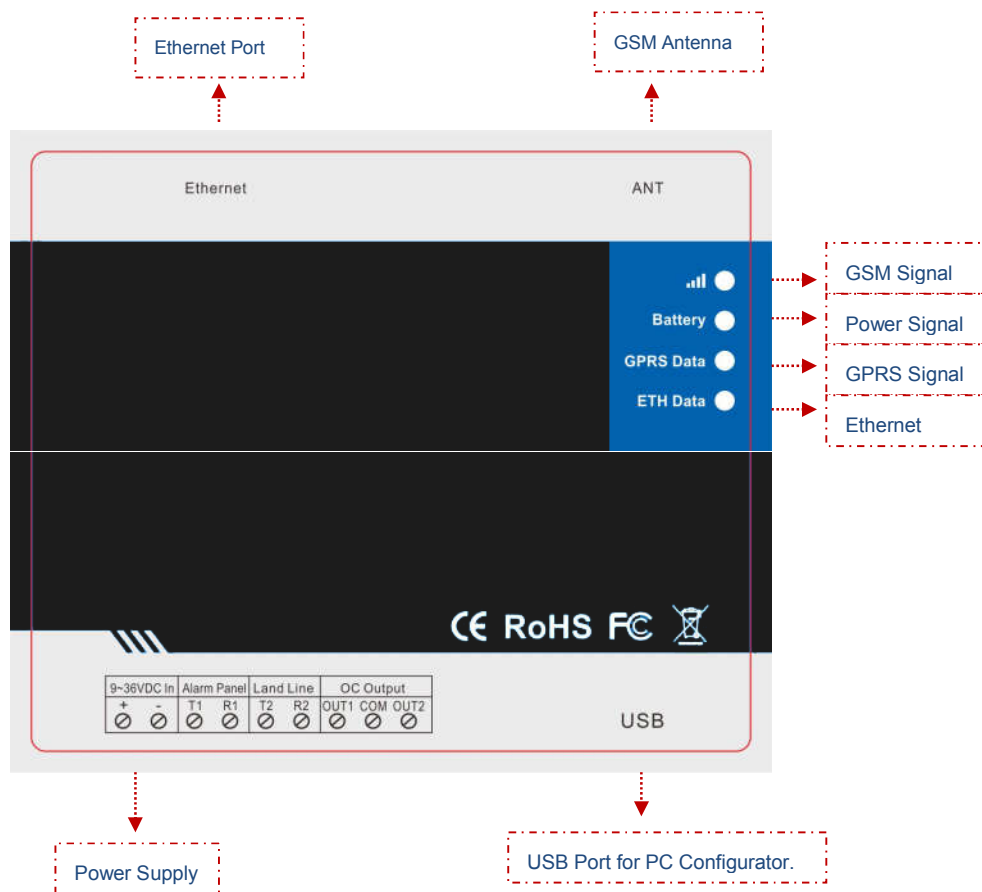

CD (User Manual & PC Configurator) x 1 piece

5. Overview of Main Panel




	T1: Connect with the ' TLP ' in PSTN control panel R1: Connect with the ' RING ' in PSTN control panel
	T2: Connect with the Land Line R2: Connect with the Land Line <i>(Notice: No connection means the control panel will transmit the message only via GPRS.)</i>
	OUT1: 1 st Outputs, OC type. COM: General terminal. OUT2: 2 nd Outputs, OC type.

6. Indicator Lights

	[RED]: GSM Indicator, blinking every 0.5s = registering the network, when the GSM signal is normal, it will blink every 1s.
	[RED]: Power Supply Indicator, blinking every 1s = the battery is on charge, ON means the battery is in full charge, OFF means disconnected from the external power adapter.
	[RED]: GPRS Data Indicator, it will blink every 1s when WGSMSD is transferring GPRS data.
	[RED]: Ethernet indicator, it will keep blinking when WGSMSD is transferring GPRS data; ON means Ethernet connect to the server successfully.

7. Connection

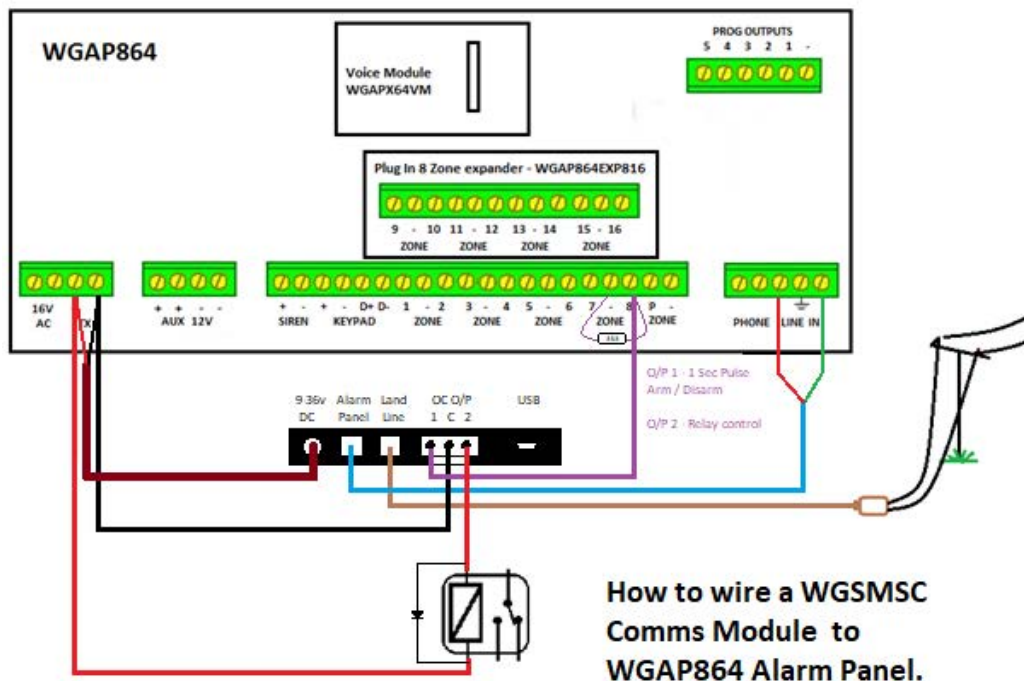


8. Installations

Notice: There are 2 methods for changing settings: PC configuration & SMS commands. Install the USB Driver before using the PC configurator.

8.1 Install the USB Driver on PC.


- 1) Screw on the GSM antenna.
- 2) Open the cover on the back the **WGSMSC** to find the SIM card holder, and insert the SIM card as below:

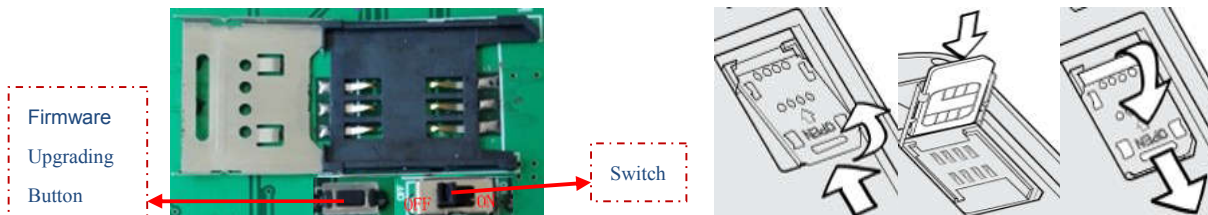

- 3) Turn on the power supply and switch WGSMSC on, and check the GSM Signal Indicator light to confirm the SIM card in WGSMSC is working. Check lights details in [【6. The Indicator Lights】](#).

8.2. Install the USB Driver on PC.


- 1) Download and install the latest **USB Driver** according to your PC operation system.
- 2) Connect the **WGSMSC** to the Computer via USB cable,
- 3) Find the **USB Serial Port** as picture below. (This COM port number will be used in PC configurator).

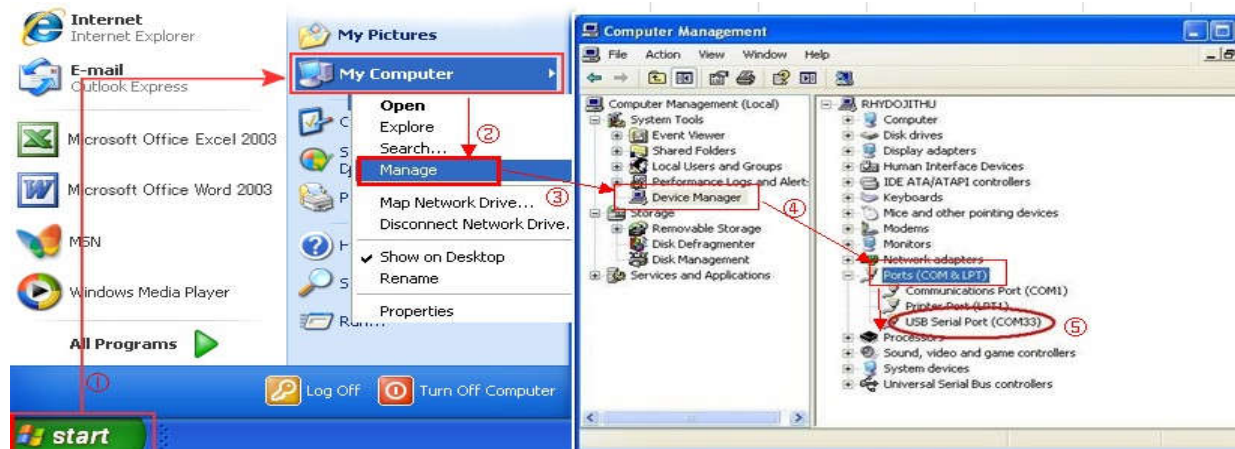

8.3. Settings in PC Configurator.

Choose the **USB Serial Port** according to [【8.2. Install the USB Driver on PC.】](#), and click [open Com](#), it will come to the [Basic Information](#) window as below:

Notice: when the settings in current window is done, please click [Save Settings](#) to complete the configuration.

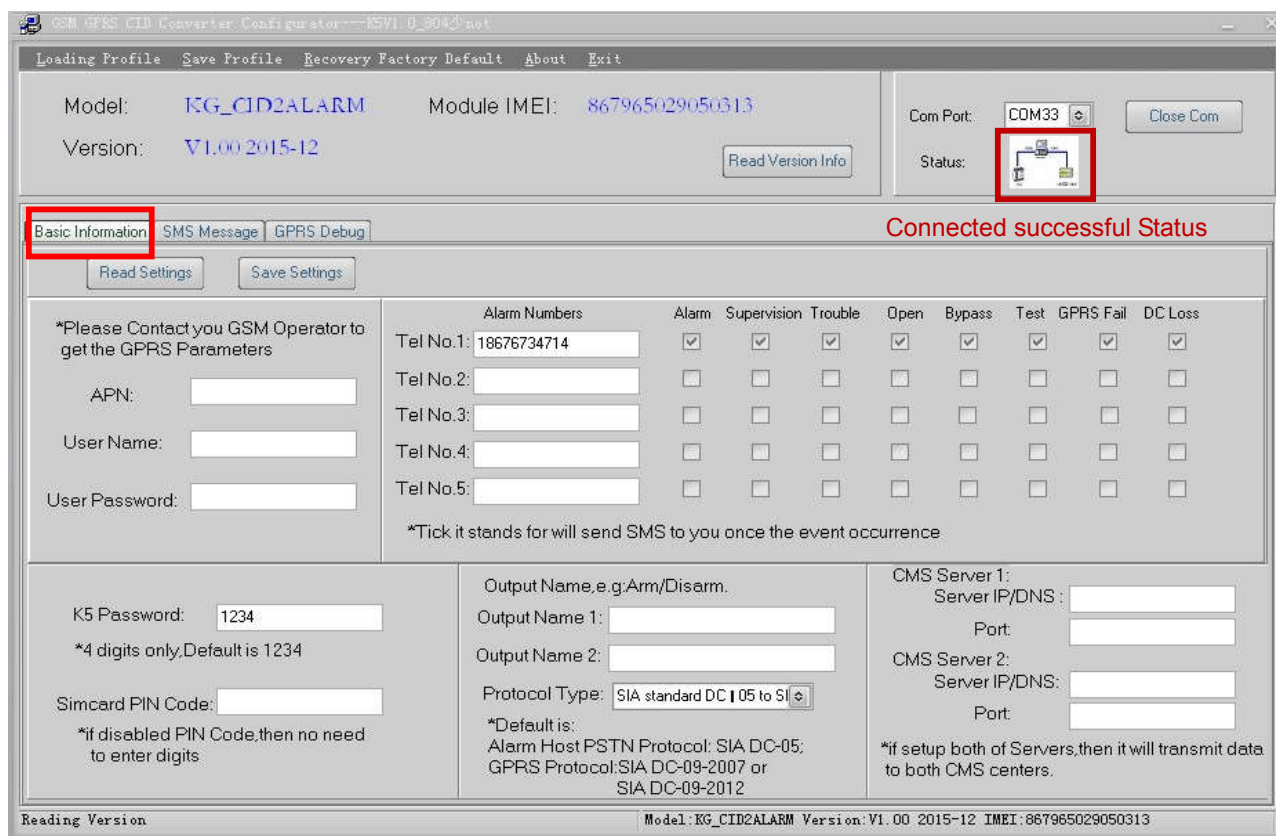


8.3.1 The Menu Bar of the PC configurator.

Loading Profile Save Profile Recovery Factory Default About Exit

<u>L</u>oading Profile	[Alt + L]: Load the setting profile that you have saved before
<u>S</u>ave the Profile	[Alt + S]: Save the settings to the local
<u>R</u>ecovery Factory Default	[Alt + R]: Reset the WGSMSD device back to the factory
<u>A</u>bout	[Alt + A]: The information about the WGSMSD
<u>E</u>xit	[Alt + E]: Exit the PC configurator.

8.3.2 GPRS data Parameter Setting.

For EXAMPLE:

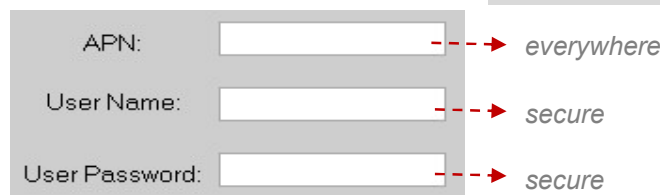

Notice: The example above is only for reference, please contact your local GSM operator for the settings accordingly. If the local GSM Operator does not use APN anymore, please ignore the settings in this section.

8.3.3 The Phone Numbers for Events Notification.

Alarm Numbers	Alarm	Supervision	Trouble	Open	Bypass	Test	GPRS Fail	DC Loss
Tel No.1: 18676734714	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Tel No.2: <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Tel No.3: <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Tel No.4: <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Tel No.5: <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Tel No. 1 – No. 5	The phone numbers for the SMS notification.
Alarm	Ademco® Contact ID Protocol Events Codes.
Supervision	
Trouble	
Open	
ByPass	
Test	
GPRS Fail	The GPRS message transmission failure notification from WGSMS .
DC Loss	The external DC Power Loss notification from WGSMS

Notice:

- 1) Tick the phone numbers in the list that will receive the SMS notification when the event occur.
- 2) Only for SMS notification, no voice communication.
- 3) **18676734714** is the phone number only for example. If the WGSMS can't work, please add your country code in front of the phone number.

8.3.4 Set the Password and PIN Code Verification.

K5 Password:

*4 digits only,Default is 1234

Account Number:

*Must be set to 4 bits,if set to replace the alarm host Account Number, if not set,continue to use the alarm host Account Number

Simcard PIN Code:

*if disabled PIN Code,then no need to enter digits

Notice:

The "WGSMS Password" is the password in the setting of [\[9. The SMS Commands.\]](#) . The "Account number."can set to replace the PSTN panel account when upload via GPRS.

8.3.5 Set the OC Outputs Names

Output Name 1:

Output Name 2:

Protocol Type:

The name of the 1st Output, default: DO1

The name of the 2nd Output, default: DO2

Alarm Host PSTN Protocol: SIA DC-05.

GPRS Protocol: SIA DC-09-2007/2012.

Notice:

The max characters for the Output Name is 40, these names will be displayed in the SMS notifications.


8.3.6 Set the CMS Server IP address and Server Port.

CMS Server 1:	
Server IP/DNS :	183.12.162.70
Port:	4005
CMS Server 2:	
Server IP/DNS:	
Port:	

Notice:

The alert messages will be transmitted to Server 2 (backup) once Server 1 failed after both of them are set.

8.3.7 Set the Output pulse time and Ethernet parameter.

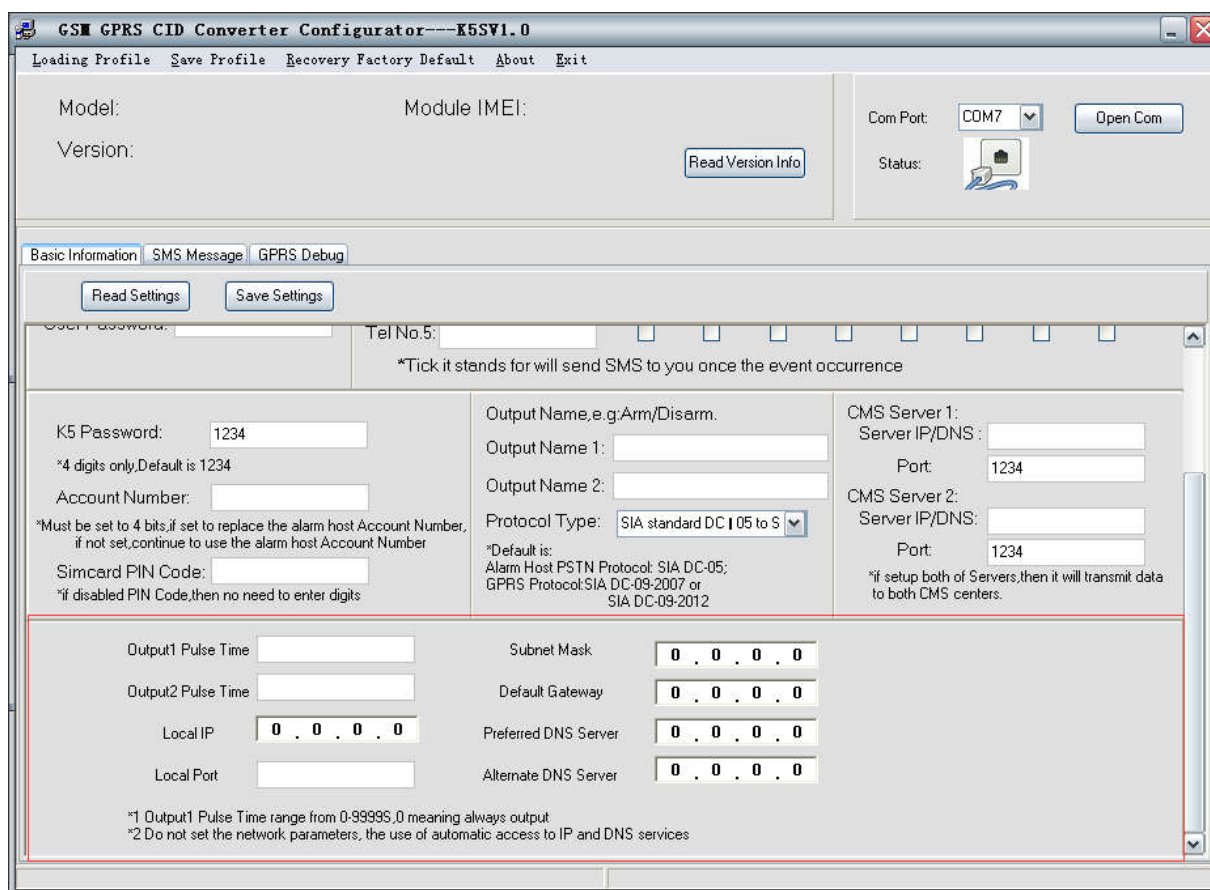


Output Pulse Time	0~99995
Ethernet Parameter	Default "0", means getting IP and DNS automatically
GPRS Module (optional)	<p>a.1) With GPRS module, if not connect the Ethernet, device will send SMS: "Ethernet connection failed, please check the wired network!"</p> <p>2) With GPRS module, if the Ethernet connect the server failed or server not response, will SMS "ETH Connect Failure"</p> <p>At this time, the alert will transfer the data via GPRS; But if Ethernet connect successfully and server response well, then not transfer the data via GPRS.</p> <p>b. Without GPRS module, only transfer data via Ethernet.</p>

8.3.8 The other buttons in PC configurator.

Open Com	Open the USB serial Com Port.
Close Com	When displayed, it means successful connection.
Read Version Info	Read the device model, IMEI Code, Version.
Read settings	Read the existed setting data in the WGSMSM.
Save Settings	Click this button to complete the current settings.
Delete Settings	Delete all the setting data in WGSMSM.
Clear Display	Clear the words displayed in the current windows (The existed settings will not be cleared).
Clear Received Data	Clear the data WGSMSM have received in the current window.
Clear Sent Data	Clear the data WGSMSM have send in the current window.
Stop Debug	Stop the debug.


Notice: There are three different windows in PC configurator: [Basic Information](#), [SMS Message](#), [GPRS Debug](#). Please click the [Save Settings](#) when the setting data in the current windows is completed.

8.3.9 Set the SMS Notification Contents.

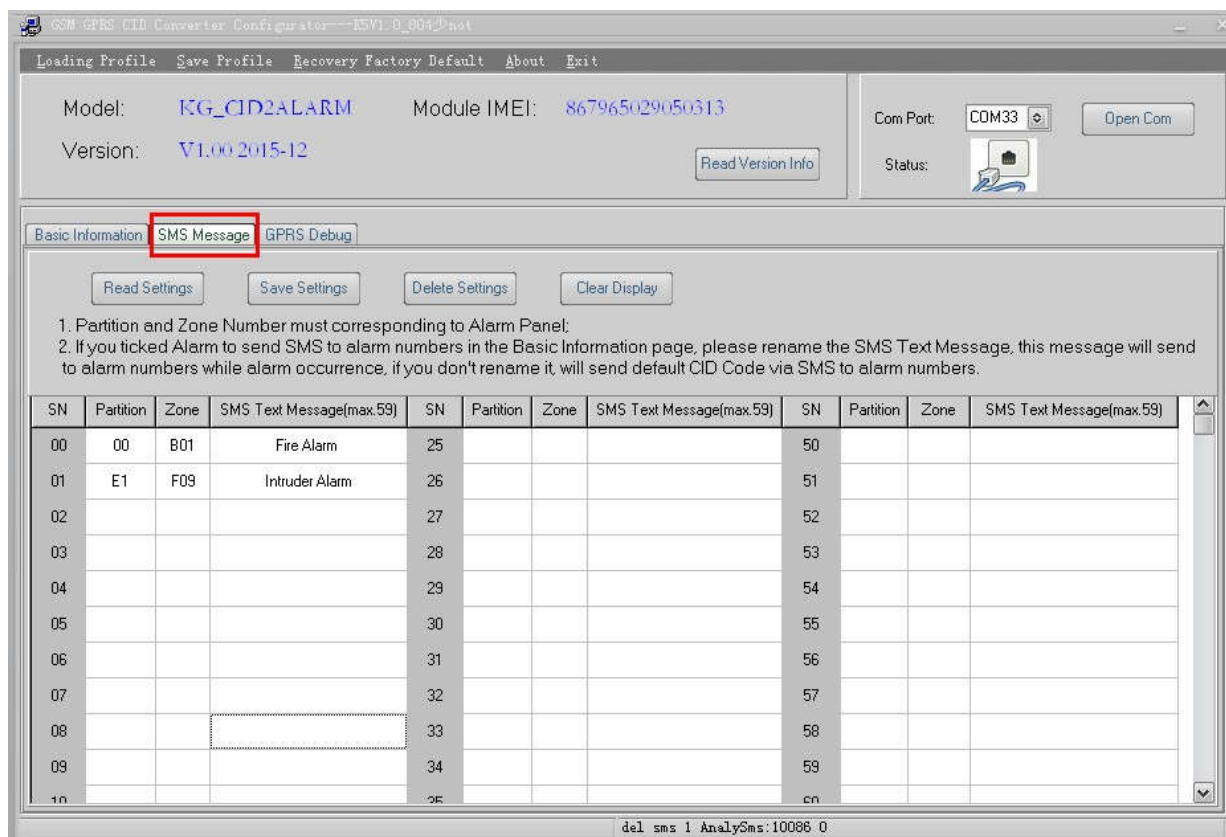

Partition	Please set it according to your PSTN control panel. (2 digits, from 0 - 9, B – F)
Zone (64 zones)	Please set it according to your PSTN control panel. (3 digits, from 0 - 9, B – F)
SMS Text Message (Max 59 characters)	The SMS alert content when the zone in the PSTN control panel is triggered. Notice: if this part is not set, the SMS Alert Message will be in SIA DC-05 code, not understandable.

8.4.0 Engineer Debug for GPRS Data Transmission.

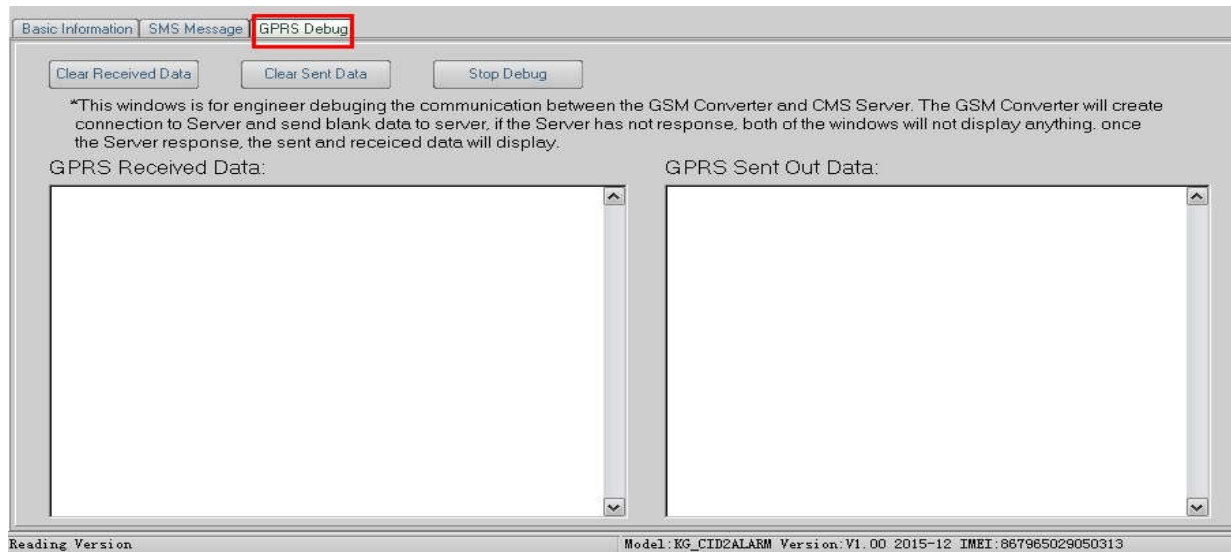

9. SMS Commands

The SMS commands below are sent to the SIM card of WGSMSM for remote configuration. Best used when you are not able to program the WGSMSM by the PC configurator.

Notice:

- 1) All the letters in SMS commands must be CAPITALIZED under the English format.
- 2) The Examples below are only for reference, send the SMS commands according to your actual situations.
- 3) The Password below is the default password (1234), please use the new password in the SMS commands when the default password was changed.

1) when the wrong SMS commands was send:

SMS Commands	Return SMS Message
	SMS Format Error, Please check Caps Lock in Command!

Notice: If any SMS command with the wrong format was send, you will receive a SMS notification as above.

2) When the external DC Power loss/Recovery

	Return SMS Message
DC Loss	External DC Power Goes OFF
DC Recovery	External DC Power Goes ON

3) Change the password (The default password is 1234, with 4 digits):

SMS Commands	Return SMS Message
Old Password + P + New Password	【New Password】 ,This is the New Password, please remember it carefully.
For Examples: 1234P4321	【4321】 ,This is the New Password, please remember it carefully.

Notice: When the password was forgot, please reset the device from the PC configurator.

4) Inquiry the device information remotely

SMS Commands	Return SMS Message
Password+ EE For Examples: 1234EE	Model: Version: IMEI: GSM Signal Value: Model: WGSMSC Version: V 1.00 2015-12 IMEI: 867965029050313 GSM Signal Value: 30

Notice:

- 1) Every WGSMSC has a unique IMEI code for firmware upgrading.
- 2) The GSM Signal Value range: 1~31.99, Signal weak value: <16.

5) Program the 5 mobile phone numbers (the max is 23 digits) for SMS notification.

Actions	SMS Commands	Return SMS Message
Set Mobile Phone Numbers	Password+ A +Serial Number + T + Phone Number For Example: 1234A3T13570810254	Tel1: --- Tel2: --- Tel3: 13570810254 Tel4: --- Tel5: ---
Inquiry the whole numbers list	Password + A For Example: 1234A	The list of the exiting numbers
Delete the phone number in the existing numbers list	Password+ A +Serial Number For Example: 1234A3	The list of the exiting numbers

Notice:

- 1) Serial Number: 1 ~ 5.
- 2) These mobile phone numbers are ONLY used for SMS notification, no voice notification.
- 3) Adding country codes in front of the mobile phone numbers is unnecessary.

6) Program the OC Outputs

Actions	SMS Comands	Return SMS Message
Set the name of the OC outputs	Password+ DO +Serial Number+ T +the name For example: 1234DO1TOutput 1 for Arm.	DO1: rename: xxxx Example: DO1: rename: Output 1 for Arm.
Inquiry the name of the OC outputs	Password+ DO +Serial Number For example: 1234DO1	DO1: Output 1 for Arm
Delete the name of the OC outputs	Password+ DO +Serial Number+ DEL For example: 1234DO1DEL	DO1: Output 1 for Arm
Switch the relay on	Password+ DOC +Serial Number For example: 1234DOC12 It means switch on both the 1 st output and 2 nd output (The serial number is 1 or 2 or both)	DO1: ON DO2:ON
Switch the relay off	Password+ DOO +Serial Number For example: 1234DOO12 It means switch off both the 1 st output and 2 nd output	DO1: OFF DO2:OFF

	Or both. (The serial number is 1 or 2 or both)	
Inquiry all the current status	Password+ DOE For example: 1234DOE	DO1: ON/OFF DO2: ON/OFF ---
Pulse output time	Password+ DOP +Serial Number (1 or 2) + T Time(Max 4 digits,9999s) Default: 0s ,means always keep close	DO(1 or 2) Pulse Output Time: xxxS
Inquiry output time	Password+ DOT +Serial Number (1 or 2)	DO(1 or 2) Pulse Output Time: xxxS
Pulse output control	Password+ DOP +Serial Number (The serial number is 1 or 2 or both)	

Notice:

1. The Serial Number: 1 means the 1st output, 2 means the 2nd output, 12 means both the 1st output and the 2nd output.
2. The name of the outputs is 40 characters (Max.)

7) Program the GPRS IP Sever and the Port:

Actions	SMS Commands	Return SMS Message
Settings	Password+ IP + IP address + P +Port Number For example: 1234IP183.12.162.70P4005	Server: Port:
Inquiry the settings	Password + IP For example: 1234IP	
Delete the exiting setting	Password+ IP + DEL For example: 1234IPDEL	

Notice:

Only the 1st server IP can be programmed via SMS commands. Program the 2nd server IP via PC configurator.

More details: [\[8.3.6 Set the CMS Server IP address and Server Port.\]](#)

8) GPRS data Parameter Setting (APN/USER NAME/PASSWORD)

Actions	SMS Commands	Return SMS Message
Settings	Password+ AP +APN;User Name;Password# For example: 1234APeverywhere;esecure;secure#	APN: User Name: Password:
Inquiry the settings	Password+ AP For example: 1234AP	
Delete the exiting setting	Password+ APDEL For example: 1234APDEL	

10. Warranty

- 1) This system is warranted to be free of defects in material and workmanship for one year.
- 2) This warranty does not extend to any defect, malfunction or failure caused by abuse or misuse by the Operating Instructions. In no event shall the manufacturer be liable for any alarm system altered by purchasers.



Cornick Pty Ltd.

<https://www.watchguardsystems.com/>